

TECHNICAL SERVICE BULLETIN

3 A 8

NO.



July, 1970

SUBJECT:

Oil Filter Replacement

MODELS:

Austin America Automatics
Equipped With Air Conditioning

Accessibility to the oil filter on Austin America automatics fitted with air conditioning is achieved by removing the distributor assembly.

After marking the position of the distributor body in relation to the distributor clamping plate, loosen the nut on the distributor plate until the distributor can be withdrawn.

Do not loosen the two bolts securing the distributor clamping plate to the engine block or ignition timing will be upset.

The filter assembly can now be removed by detaching the two bolts securing the filter head to the transmission front cover, for servicing on the bench.

Please ensure that a new gasket, part number 22A 1388, is fitted correctly between the filter head and the front cover.

Since filter replacement is coincidental with distributor point service, no additional time is required.